

YesSOS GPS/GSM Locator Operation instructions

Getting started. Please read carefully

Important: Make sure standard GSM SIM card is not locked with a pin code and is set to show caller id. INSERT SIM card in a mobile and check this. RED light on YesSOS device will flash if there is a problem with SIM
SPECIAL NOTE. DO NOT use a Telstra pre-paid sim card

Slide SIM cover to left, slide SIM card holder to left and lift up.
Slide small battery switch at bottom to left
Insert SIM card in holder and drop and slide to right. Slide cover back and press button 2 to turn on. (Hold buttons for 2 seconds)
Put on charger for at least 2 hours initially.
DO NOT GO FURTHER TILL DEVICE IS CHARGED
Make sure SIM card has been activated with your service provider, usually you have to wait 30-60 minutes after activation.



Yes SOS device operation

LED lights. (Status indicators)

Power on Normal

Power Flashing. low battery. (Battery lasts around 18 hours when satellites in view and 2-3 days when not. Charge nightly or at least every couple of days)

GPS on. Satellites in view.

GPS flashing, no satellites in view.

GSM on. Unit is receiving/sending on the cellular network.

SOS on. Sending an SOS alert.

SOS flashing SIM card error Problem with SIM card

Press **LH & RH SOS buttons** for 2 seconds, device sends SOS alert and street address to preset phone numbers and email addresses

Press **RH SOS** button and 1, 2 or 3 buttons for 2 seconds, device sends an alert and street address to preset phone numbers and email addresses.

Press **1, 2 or 3** to dial out preset numbers for normal phone call.

Press **1 & 3** for 2 seconds to turn device **OFF**. (Also do this to stop any accidental dial out)

Press **2** for 2 seconds to turn device **ON**.

During conversation, press **LH SOS** to lower volume. Press **RH SOS** to raise volume. (Holder can talk hands-free with highest volume)

To phone the **YesSOS** device just dial its SIM card number, you will hear 2 ring tones, **voice will say 'Press 1 for phone conversation'**.

Holder presses **1,2 or 3** to take call or cut call or device disconnects when caller hangs up

YesSOS device programming.

Visit www.phantomeye.net and **Log in at Service centre website,** PhantomEye website.

1. Enter username and Password provided on the invoice which came with the product. Or contact us if you don't have them.
2. After logging in, select **Setup/Add a GPS device**. Choose **YesSOS/Submit** Then give the device a name and add it's SIM card number.

Special note

Sometimes the mobile network is busy, a small delay may occur when sending phone numbers to device from PhantomEye. (step 4.)

3. Click **Device Config** select Locator device/YesSOS/ Submit.
 4. Click **Device Config**. Click **Set 3 phone numbers**. These are the numbers sent to device for buttons 1, 2, and 3 speed dial numbers. When entering numbers replace first **0** with **61**. Click **Submit** Device will beep **ONCE**
 5. Click **Device Config**. Click **Edit Name**. Change name for the device if you prefer.
 6. Click **Setup**. Click **Change password** and change if you want to.
 7. In **Setup** Click **Add/Edit Supervisors**. Here you add/edit Supervisor name/s (You and others) and numbers, (again, replace 0 with 61) and **email addresses** to be alerted by YesSOS device. **Tick: 2. System alerts, 6. VAM High Alert/SOS Message, 8. VAM Low alert/Location message only**. Other choices are for other companies using PhantomEye service. Do the above twice, Email alerts **AND** SMS alerts
 9. Click **Setup**. Click **Modify time zone for locators**. Enter city of nearest location.. 10. In **Setup** click **Edit email address** and enter your normal email address.
 11. In **Setup** click **Modify time zone for system reporting** and select city closest to your location.
- Tracking note.** The **YesSOS** device updates it's position via satellite every 20 seconds, so if inside a building, last position will be building entry. The longer device is visible to satellites, **the more accurate the position**.

Congratulations!

Your **YesSOS GPS/GSM personal locator** is now ready for use.
Check FAQ on back here if encountering problems

PhantomEye operations menu selections.

Location reports.

This is where you can find **YesSOS** device location if it has been activated or polled.

Most useful is "Latest 24 hour location report".

Also download Google Earth (it's free) to your PC and in 'Data Exports' you can see device positions on Google Earth.

Device Config.

Here you set up device and can also program it to be tracked/send back location at time or distance intervals. To find device location click

"Request/Poll last known location" then check **Location reports**.

Usage reports tells you how many credits are left and usage.

Setup. This is used to initially set up device.

Manage Waypoints. In location reports you can name a location and here you can change/delete it

Fleet View If you are supervising several devices you can get a location in text form for all in one view.

Control Room. You can click Screen A or B to check device locations

Buy credits. Here you can add credits to your account. Note, account will be updated by PhantomEye service centre during business hours only. PhantomEye control centre time is GMT + 10

NOTE: You can download the mobile/cell phone program to track the YesSOS device from the Phantom Eye service centre website at www.phantomeye.com Click **'Mobile client'** on menu

Warranty and conditions.

The **YesSOS** GPS/GSM Personal Locator and accessories are guaranteed for 12 months from date of purchase. Should it malfunction in this period, we will replace it. Damage by dropping, opening or damage by external forces will nullify this warranty.

Although we use our best endeavours to provide a reliable product and position reporting, no responsibility for injury or death from malfunction or inaccurate location reports will be accepted by YesSOS or associated entities.

Your use of the **YesSOS** device the first time is deemed an acceptance of these conditions.

YesSOS. 1800 222 001